

# Welcome to ProPlacard

We're excited to get you started. Mounting is easy as 1·2·3.

## 1 CLEAN AND MARK


Wipe down your mounting spot. Measure from a point you can find on every door, like the top edge, and mark a cross with a dry erase marker. Write your measurements down and use them on every door.

## 2 MOUNT THE BASE

Line the cross sight in the center of the base up with your mark. Drive your screws or rivets through the four center holes. Snug them down, don't crush them.

## 3 TWIST. LOCK. DONE.

All of your placards twist and lock into the same base. Swap them in seconds, no tools, and keep the whole set together on the door.

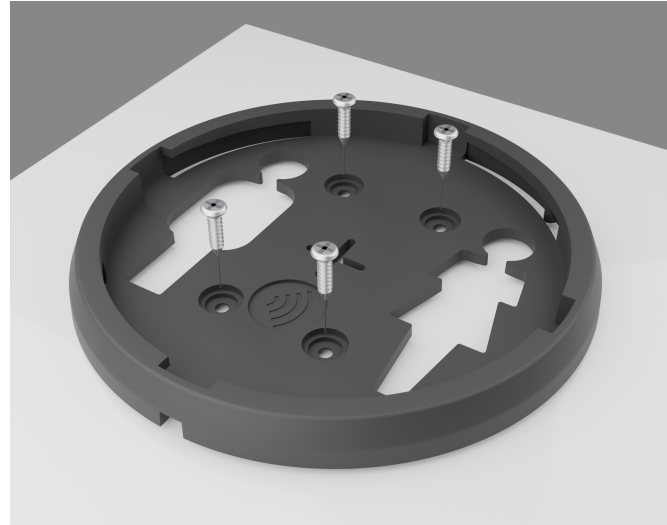

The Intelligent Base mounts through the four center holes. The cross is your alignment sight.

### WHAT YOU NEED

- Dry erase marker
- Tape measure
- Drill driver or rivet gun
- 4 screws or rivets per base



Welcome to  
**ProPlacard.**